



Tableau de choix des équipements et des enveloppes

configurez votre système LCS³ et LCS² (suite)

CORDONS DE BRASSAGE ET UTILISATEURS RJ 45 (p. 1012)				LCS ³			
				Cat. 8	Cat. 6 _A	Cat. 6	
	LSZH	S/FTP	Impédance 100 Ω	0,5 m	0 337 01	-	-
				1 m	0 337 02	-	-
				2 m	0 337 03	-	-
				3 m	0 337 04	-	-
				5 m	0 337 05	-	-
				8 m	0 337 06	-	-
				10 m	0 337 07	-	-
				0,5 m	0 337 21	-	-
					0 337 08	-	-
				1 m	0 337 22	-	-
					0 337 09	-	-
				2 m	0 337 23	-	-
					0 337 10	-	-
				3 m	0 337 24	-	-
					0 337 11	-	-
				5 m	0 337 25	-	-
					0 337 12	-	-
8 m	0 337 26	-	-				
	0 337 13	-	-				
10 m	0 337 27	-	-				
	0 337 17	-	-				
	LSOH	S/FTP	Impédance 100 Ω	1 m	0 518 70	-	-
					0 518 66	-	-
				2 m	0 518 71	-	-
					0 518 67	-	-
		3 m		0 518 72	-	-	
				0 518 68	-	-	
		5 m		0 518 73	-	-	
				0 518 69	-	-	
	F/UTP	Impédance 100 Ω	1 m	0 518 54	-	-	
				0 518 50	-	-	
			2 m	0 518 55	-	-	
				0 518 51	-	-	
			3 m	0 518 56	-	-	
				0 518 52	-	-	
			5 m	0 518 57	-	-	
0 518 53	-	-					
U/UTP	Impédance 100 Ω	1 m	0 518 62	-	-		
			0 518 58	-	-		
		2 m	0 518 63	-	-		
			0 518 59	-	-		
3 m	0 518 64	-	-				
	0 518 60	-	-				
5 m	0 518 65	-	-				
	0 518 61	-	-				