

## Connectivity and housing selection table

configure your system (continued)

WHITE MOSAIC RANGE RJ 45 SOCKETS				Cat. 6 <sub>A</sub>	Cat. 6	
	1 module	STP	0 765 73	0 765 63		
		FTP	-	0 765 62		
	2 modules	STP	0 765 76	0 765 66		
		FTP	-	0 765 65		
	2 x 45° tilted modules	STP	0 765 08	0 765 07		
		FTP	-	0 765 05		
	90° sockets	STP	-	0 765 93		
		FTP	-	0 765 92		
	Anti-microbial	STP	0 765 84	0 765 83		
		FTP	-	0 765 82		
	Controlled access	STP	0 765 99	0 765 96		
		FTP	-	0 765 95		
	Green flap	STP	0 765 24	-		
		FTP	-	0 765 22		
	Orange flap	STP	0 765 25	-		
		FTP	-	0 765 23		
2 RJ 45 sockets	FTP	-	0 765 46			
Copper feedthrough	STP	0 786 28	-			
	FTP	-	0 786 23			
Splitter sockets	Ethernet/Ethernet	FTP	0 765 39	0 765 39		
	Telephone/Ethernet	FTP	0 765 37	0 765 37		
	Telephone/telephone		0 765 35	0 765 35		
PoE SWITCHES AND INJECTOR						
	1 Gigabit PoE switch	4 RJ45 outputs	<b>N</b>	0 335 08		
	10/100 Mbits PoE switch	4 RJ45 outputs	<b>N</b>	0 335 03		
	PoE injector	4 inputs/4 outputs			0 335 01	
		1 input/1 output			0 327 37	
ZONE DISTRIBUTION BOXES				Cat. 6 <sub>A</sub>	Cat. 6	
	Zone distribution boxes Equipped with 12 RJ 45 connectors	STP		0 335 49	0 335 46	
		FTP		-	0 335 45	
		UTP		-	0 335 44	
	Block of 6 RJ 45 connectors	STP		-	0 335 66	
		FTP		-	0 335 65	
		UTP		-	0 335 64	
	Area distribution box To be equipped with up to 12 RJ 45 connectors			-	0 337 96	